



Aprilaire® Power Humidifier Operation

The humidifier fan draws dry, heated air from the furnace duct through the Water Panel® evaporator. The moisture-treated air then wraps around both sides of the Water Panel and returns through the side louvers into the furnace's air flow, providing comforting, humidified air to the entire home.

SPECIFICATIONS	CAPACITY gph 120°F plenum temp.	SQ. FT. AREA* Loose house {2 air changes/hr.} Average house {1 air change/hr.} Tight house {1/2 air change/hr.}	A. UNIT SIZE {inches}	WATER FEED RATE gph	ELECTRICAL DATA	ALSO INCLUDED
			B. PLENUM OPENING {inches}			
POWER HUMIDIFIER Model 768	0.75	1,050	A. 15 ^{29/32} W x 15 ^{31/32} H x 10 ^{11/32} D	6	120V-60 Hz- 0.8 AMP UL SR	Saddle Valve
		2,100	B. 14 ^{7/8} W x 14 ^{3/16} H			
		4,200				